Remote Control Setup Guide

This remote control is already pre-programmed to control your Set Top Box (STB). The instructions below will program this remote to control your television



Option 1 (Preferred)

- 1. Manually turn ON the television that you want to link to the remote.
- 2. Press and release the **TV** key.
- 3. Press and hold the **SETUP** button until the **TV** key blinks twice.
- 4. Press and release the **TV** key.
- 5. Find your TV brand on the chart below and note which DIGIT key matches your brand. Press and hold down the DIGIT key for your TV while pointing the remote at your television.
- 6. Let go of the key when your TV turns OFF. Setup is now complete.

DIGIT	TV BRAND
1	Insignia
2	LG
3	Panasonic
4	Philips/Magnavox
5	Samsung
6	Sanyo
7	Sharp
8	Sony
9	Vizio
0	Westinghouse

Option 2 (If your TV brand is not listed 0n the chart above)

1. Press and release the TV button

The next four steps need to be done in quick succession

- 2. Press and hold the **SETUP** button until the **TV** button blinks twice.
- 3. Enter in **9-9-1**.
- 4. Aim the remote at the TV, then press and release the **POWER** button.
- 5. Press and release the CH+ or CH- until the TV shuts off.
- 6. Press the **POWER** button to turn the TV on.
- 7. Press the **SETUP** button to store the code for the TV. The TV button will blink twice. The remote is now ready to operate your TV.

